




# СПИСОК ЗАПАСНЫХ ЧАСТЕЙ

## Установка для слива отработанного масла мобильная UZM 8081

Конфиденциально

1

7/12

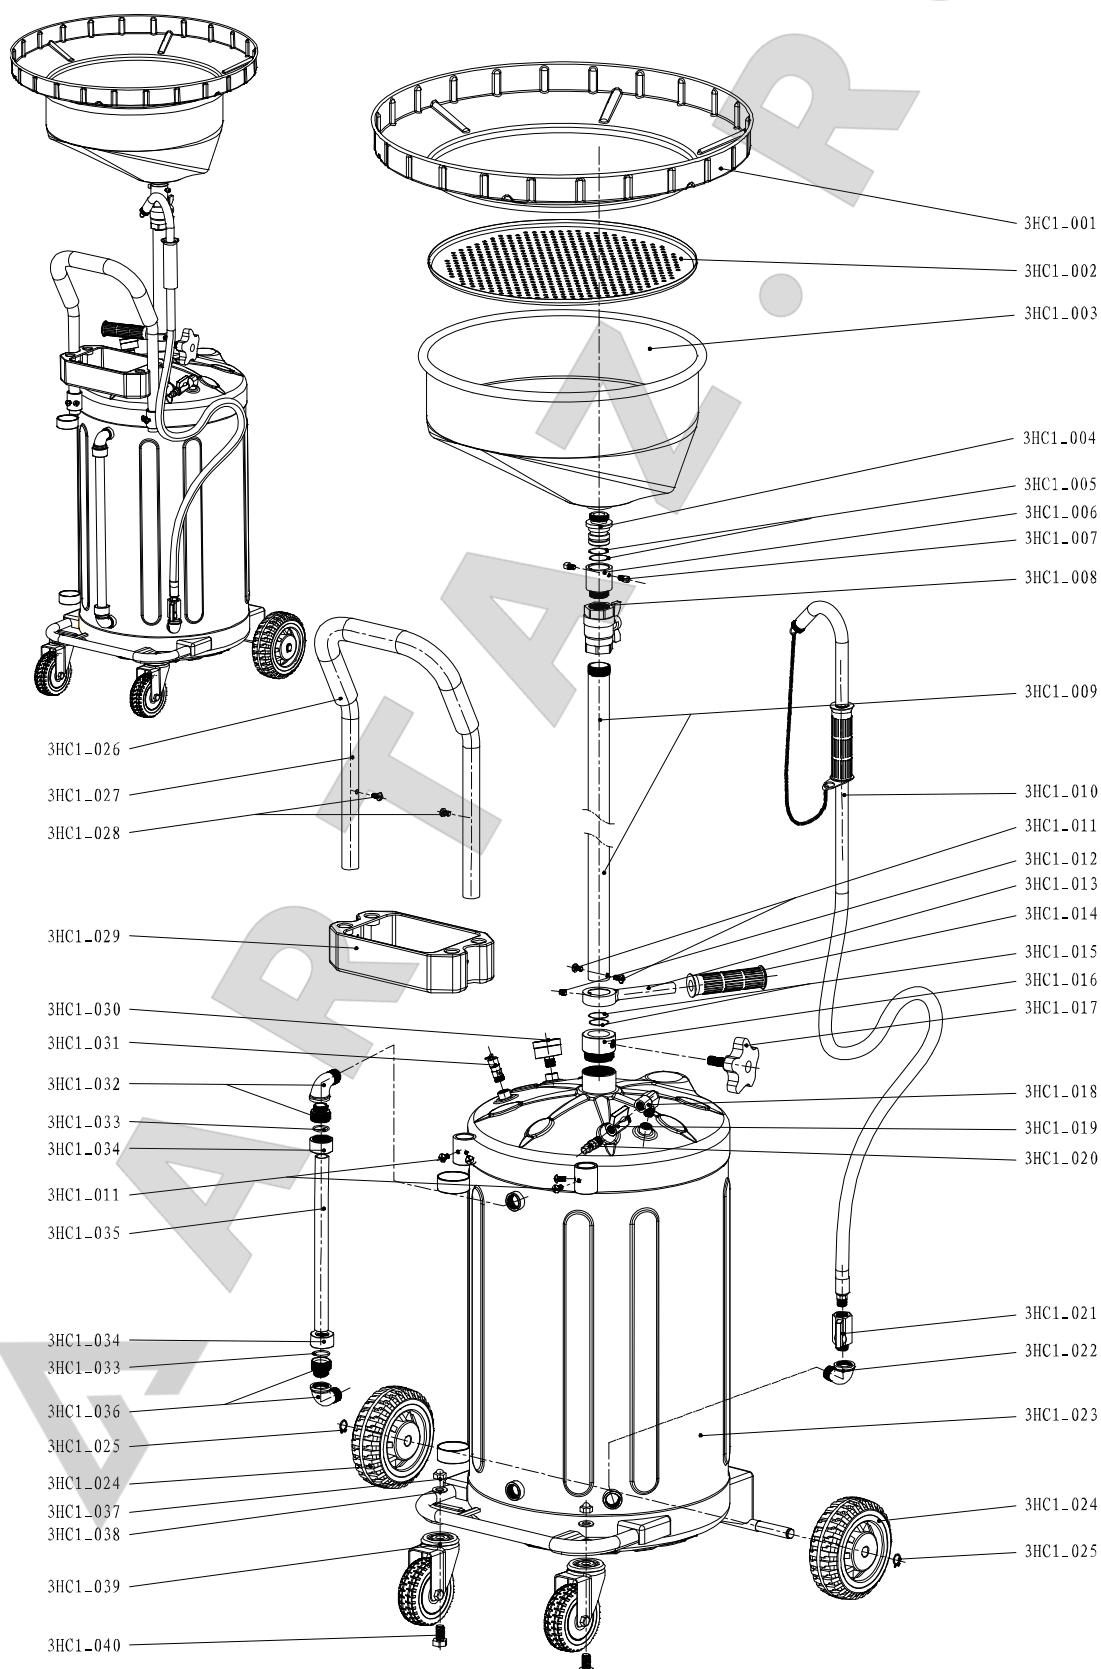



## СПИСОК ЗАПАСНЫХ ЧАСТЕЙ

Установка для слива отработанного  
масла мобильная UZM 8081

Конфиденциально

2

7/12

NO	ART.	Description	Описание	Кол-во, шт.
1	3HC1_001			1
2	3HC1_002			1
3	3HC1_003			1
4	3HC1_004			1
5	3HC1_005			2
6	3HC1_006			1
7	3HC1_007			2
8	3HC1_008			1
9	3HC1_009			1
10	3HC1_010			1
11	3HC1_011			6
12	3HC1_012			1
13	3HC1_013			1
14	3HC1_014			1
15	3HC1_015			2
16	3HC1_016			1
17	3HC1_017			1
18	3HC1_018			1
19	3HC1_019			1
20	3HC1_020			1
21	3HC1_021			1
22	3HC1_022			1
23	3HC1_023			1
24	3HC1_024			2
25	3HC1_025			2
26	3HC1_026			1
27	3HC1_027			1
28	3HC1_028			2
29	3HC1_029			1
30	3HC1_030			1
31	3HC1_031			1
32	3HC1_032			1
33	3HC1_033			2
34	3HC1_034			2
35	3HC1_035			1
36	3HC1_036			1
37	3HC1_037			2
38	3HC1_038			2





## СПИСОК ЗАПАСНЫХ ЧАСТЕЙ

Установка для слива отработанного  
масла мобильная UZM 8081

Конфиденциально

3

7/12

39	ЗНС1_039		2
40	ЗНС1_040		2

