



DBL1200

Charging Computer

for lead acid / AGM / gel / fleece / Lithium-Ion batteries



DBL1600-14 (Standard)
Device similar to figure



DBL1600-14-B (B-Version)
Device similar to figure



DBL1600-14 - derivative table

Type	Input voltage	Output voltage		Output current		Menu language	Firmware	Cat. No.
		Pb	Li	nom.	max.			
DBL1200-14	100-240VAC	14,4VDC	-	80A	90A*	Multi	v1.41	107073/2/000
DBL1200-14-B	100-240VAC	14,4VDC	-	80A	90A*	Multi	v1.41	107075/2/000
DBL1200-28	100-240VAC	28,8VDC	-	40A	45A*	Multi	v1.41	107074/2/000
DBL1200-28-B	100-240VAC	28,8VDC	-	40A	45A*	Multi	v1.41	107098/2/000
DBL1200-14	100-240VAC	14,4VDC	14,0VDC	80A	90A*	DE	v1.70	107073/2/021
DBL1200-14	100-240VAC	14,4VDC	14,0VDC	80A	90A*	EN	v1.70	107073/2/022

* Refer to description: current limiting

Order option:

../0/...: without accessories

../2/...: with accessories

5m Schuko-power cable (Art.140501)

5m/16qmm power cable (Art.140708)

CHARGING COMPUTER

DBL1200





Firmware specification:

Firmware	Charging modes	Menu language
v1.41*	AUTOMODE, FSV, LADEN-Pb	Multi: DE, EN, ES, FR, IT
v1.42*	FSV, LADEN-Pb, LADEN-Li (LFP), Power-Up, Automatic FSV/Pb/LFP Detection	Order option: DE or EN
v1.70*	FSV, LADEN-Pb, LADEN-Li (LFP), Power-Up	Order option: DE or EN (see Cat. No.)

* Customized parameterization and universal charging programs on request (o.R.)

1. Input

Input Voltage	100-240VAC wide range (tolerance: 85VAC-265VAC), 45-65Hz 130-350VDC; CAUTION: When using inductive power transfer please contact us for a special firmware!
Inrush current	30A at 264VAC, independent from temperature Circuit breaker: 16A, time-lag fuse (e.g. characteristic B)
Input Current at nominal load	<10A (115V) / 7A (230V)
Power factor	>0,98
No-load power	typ. 10W with deactivated output
Input Fuse	F1 (2x 7A-8A T)/250V (6,3x32mm)
Transient over voltage protection	Varistor (8kA / 151J)
Plut input	IEC/EN 60320, C14

2. Output

Output (Factory settings)	Connection of charger leads via welding cable connector (bayonet connector type); Output relay (load detection / reverse polarity protection); Output voltage monitored by OVP (Over Voltage Protection) and complete disable of output current if preset charging voltage limit is exceeded. Extensive functional description of the charger's features - see operating instructions.
Charge Mode (Factory settings)	When starting the DBL the predefined charging voltage is set (e.g. 14,4VDC / 28,8VDC). If charging current goes down the predefined limit (e.g. 2,5A) then the charging voltage is reduced to trickle charge (e.g. 13,2VDC / 26,4VDC). If additional current is required, the charger will again increase the charging voltage (to e.g. 14,4VDC / 28,8VDC).
Current limiting	Current limit is user selectable. According to the operation state the current limit is automatically adjusted during operation, depending on mains voltage (see output power curve on page 5), operating temperature, load characteristic etc. The maximum current limit value (see table on page 2) is provided for max. 1 minute continuously followed by a cooling period for approximately 4 minutes.
Plug output	Welding cable connector (plug [-] / socket [+]) for wire cross section 16/25qmm

CHARGING COMPUTER

DBL1200

Alle Daten gemessen bei nom. Eingangsspannung, Vollast und 25°C Umgebungstemperatur, wenn nicht anders gekennzeichnet. / All parameters are specified at nom. input voltage, full load and 25°C ambient, if not marked otherwise.





3. Regulation accuracy U_{out}

Tolerance	+/-2% over all
Load regulation static (10-90%) dynamic (10-90%)	<0,5% typ. 0,05 % < 5% 100Hz
Recovery time	<1ms
Temperature drift	-25°C ... +50°C: < 1% (typ. 0,5%; @0-40°C: typ. 0,4%)
Voltage ripple	<50mVpp
Switching spike	<300mVpp

4. EMC (Electromagnetic Compatibility)

Emission

RFI emission	EN55011 Klasse B (with signal lamp / interface connection [*1]: Class A)
Current harmonics	EN61000-3-2
Immunity	EN61000-6-2

5. General Data

Ambient temperature operating	-25°C...+60°C (automatic output power derating –see cooling)
Storage temperature	-40°C ~ 85°C
Cooling	Convection cooling and internal fan (fan regulation and monitoring is micro-processor controlled). Automatic power reduction at high temperatures in conditions of inadequate convectional cooling. Fan failure forces alarm signal as well as reduction of output power to emergency level. Sealed housing. No air interchanges with polluted air from outside.
Humidity	95% no operation in presence of dewing, coated PCB by varnish
Vibration acc. to IEC 68-2-6	10 Hz – 150 Hz, 0,15mm or 2g, 90 min. under resonance
Shock acc. to IEC 68-2-27	30g for 18 ms in 3 directions
Pollution degree acc. to EN50178	2
Climatic category acc. to EN60721	3K3
Degree of protection acc. to EN60529	IP54

CHARGING COMPUTER

DBL1200

Alle Daten gemessen bei nom. Eingangsspannung, Vollast und 25°C Umgebungstemperatur, wenn nicht anders gekennzeichnet. | All parameters are specified at nom. input voltage, full load and 25°C ambient, if not marked otherwise.



**Safety/Protective system**UL1236
EN61010-1
EN60335-1
EN60335-2-29
Protection Class I**Isolation voltage**

Input/output: 3kV each unit; output/chassis: 500VDC

MTBF

> 400 000 IEC 1709 (SN 29 500)

Efficiency

typ. 90%

CaseMetal, especially designed for car manufacture and service stations.
Mounting option via 6 screws size M6 at the side.**Dimensions (DxWxH)**Standard-Version 340 x 295 x 146,5mm
B-Version 355 x 385 x 143mm**Weight**

(without cables nor package)

Standard-Version approx. 8,2 kg
B-Version approx. 8,5 kg

6. Interface

Interface (25-pol. SUB-D)^{[*1][*2]}

For various purposes (e.g. floating Relays, Remote ON/OFF etc.)

RS232 (9-pol. SUB-D)^{[*1][*2]}

For communication or firmware update (standard PC interface)

^[*1] For connecting external equipment use a shielded cable**ATTENTION:**GND-Pins not galvanically isolated to the power output! When connecting the
^[*2] device with an external control a galvanic isolation must be provided!**Signals**

3 high power LED's for operating state indication / alarming

LCD display

Big sized graphic display

3-key operator panelMenu navigation as well as configuration / parameterisation of operation mode
and individual device parameters (among others output voltage, current limits,
security parameters, start / stop behaviour, short circuit reaction etc.)
Extensive functional description see operating instructions


CHARGING COMPUTER

DBL1200

Alle Daten gemessen bei nom. Eingangsspannung, Vollast und 25°C Umgebungstemperatur, wenn nicht anders gekennzeichnet. | All parameters are specified at nom. input voltage, full load and 25°C ambient, if not marked otherwise.



7. Output Power Curve

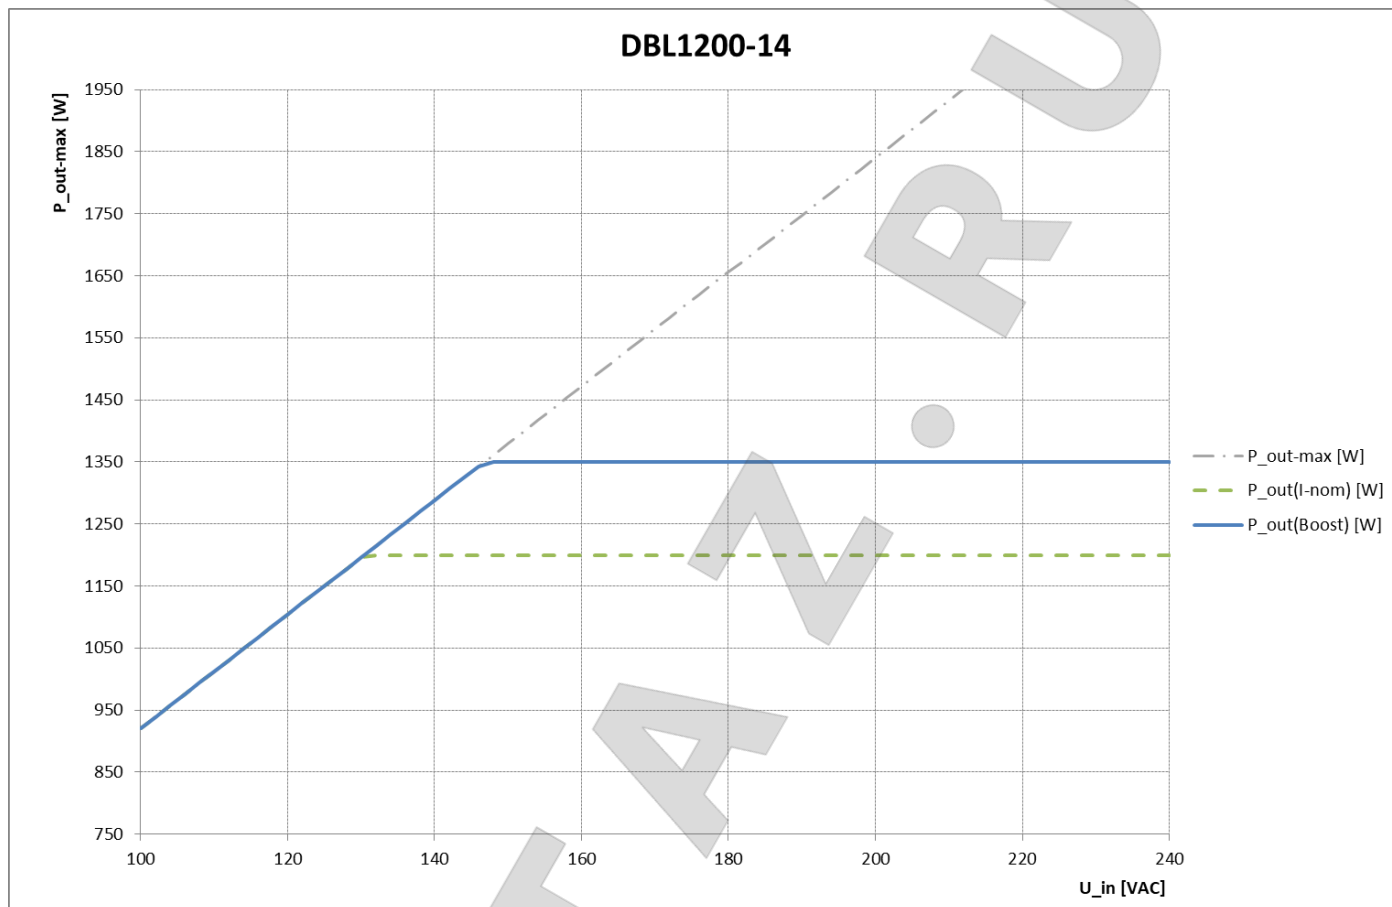

Note:

To reach full output power, it is possible to connect the device across two phases in case of low supply voltage (f.e. USA 120VAC). Protective earth connection has to be properly bonded in any case.

CHARGING COMPUTER

DBL1200






8. Dimensions


Standard case version:

Display, main on/off switch, interface and connector on the front

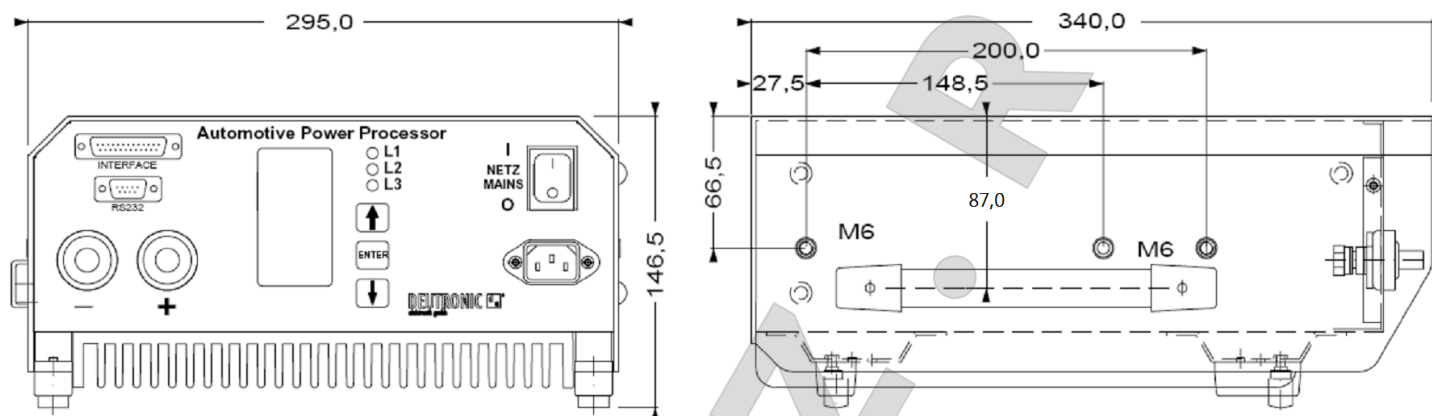

case version B:

Main on/off switch, interface and connector on the front, display on the top.

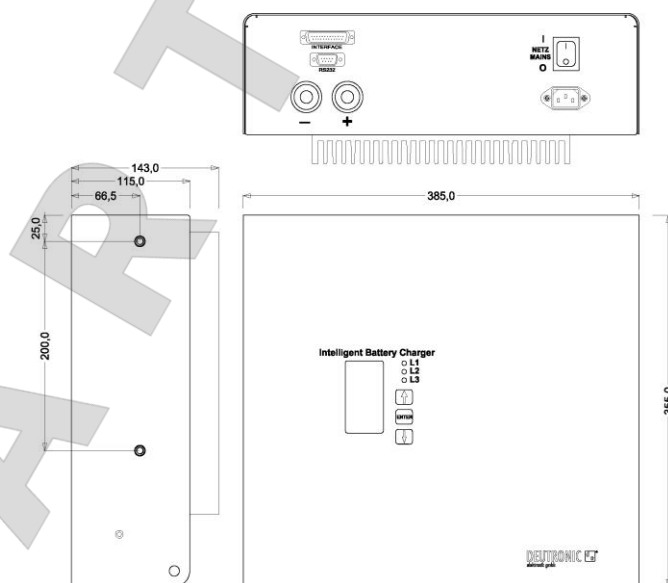

CHARGING COMPUTER

DBL1200

All data measured at room temperature, 25°C. Input voltage, full load and 25°C ambient, if not marked otherwise.





9. Optional accessories for DBL charger series

- Wall mount
- Transport cart
- Charging cables (3 and 5 meters)
- Mains cable (3 and 5 meters)
- PC-Software
- External signal lamp

and more on our webpage www.deutronic.com.

(For DBL series chargers with max. output current >100A we recommend using charging cables with a diameter of at least 25mm²).

10. Important (safety-) notes

Generally it is recommended to use by Deutronic released equipment, only. Because only in this way an appropriate technical suitability and an adequate dimensioning can be ensured for professional use.

Equipment and accessories have to be selected and installed in accordance with the requirements and under attention of the existing safety guidelines.

Note:

Mains cables / charging cables must be used in completely unrolled condition only, to ensure a sufficient cooling!

Moreover pay attention of a safety interlocksystem at the respective device to ensure the operational safety and to avoid damages. If worn, the cables must be replaced immediately!

CHARGING COMPUTER

DBL1200

Alle Daten gemessen bei nom. Eingangsspannung, Vollast und 25°C Umgebungstemperatur, wenn nicht anders gekennzeichnet. | All parameters are specified at nom. input voltage, full load and 25°C ambient, if not marked otherwise.

